

Measuring Instruction

Pinz


Wholesale Blind and Sail Manufacturer

PINZ PTY LTD

© Pinz Pty Ltd 2007

Café Blind Pitched Heads

Measure all from the outside of the structure
Supply all measurements in mm.

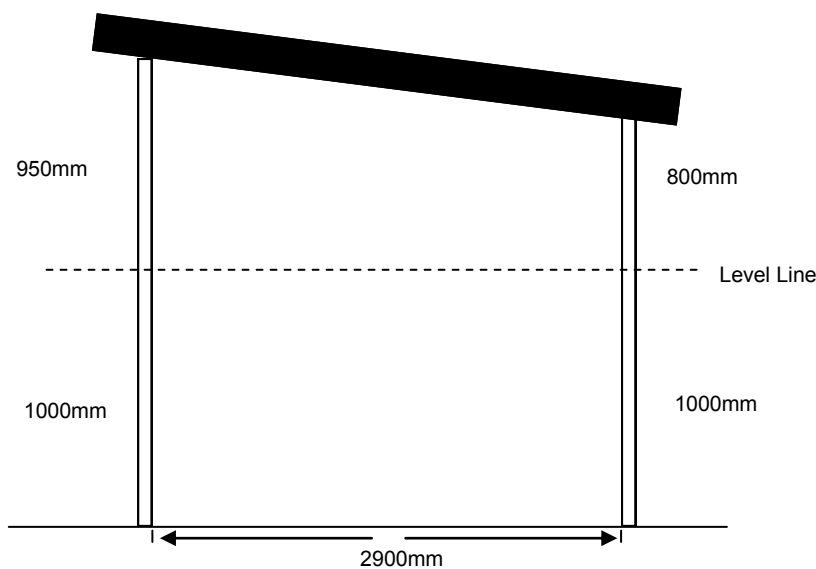

Measuring Instructions

- Measure width at Top, Middle and Bottom
- Use string line or laser level to create level line
- Measure above the line and below the line on the left and right side.
- Add the measurement above the level line to the measurement below the level line. (If ground is sloping use the lesser of the two measurements under the line.)

This blind would be ordered with 2900mm as width, Left Drop 1950mm and Right Drop 1800mm.

If ground is not level we recommend ordering a valance.



All documents available in PDF Format on www.pinz.com.au

Pinz

Wholesale Blind and Sail Manufacturer

PINZ PTY LTD

www.pinz.com.au PH 08 8244 7888 FX 08 8244 7900

© Pinz Pty Ltd 2007