


### Installation Recommendations

#### Face Fixing Channel-It™


##### Step 1

Each Side Channel needs a minimum of 3 Screws (Flat Head - Self Tappers)  
1 close to Top, 1 Close to Bottom, 1 Middle.  
Drill through Front & Rear Wall of Side Channel with 6mm Bit.

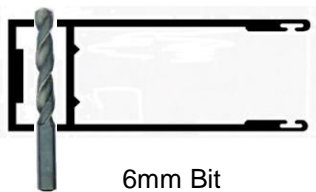

##### Step 2

Drill through 'Front Only' with a 10mm Bit to allow the Screw Head & Driver Bit through.  
After installation, insert 10mm Plug to cover the hole.

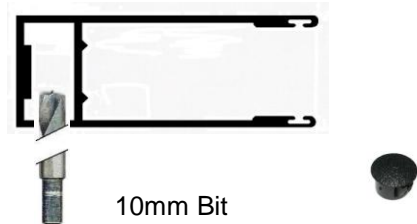

#### Inside Reveal Fixing Channel-It™


##### Step 1

Each Side Channel needs a minimum of 3 Screws (Flat Head - Self Tappers)  
1 close to Top, 1 Close to Bottom, 1 Middle  
With Side Channel facing down, Drill through both Rear & Middle walls with 6mm Bit



##### Step 2

Turn Side Channel over and Drill through Middle Only' with a 14mm Bit to allow the Screw Head & Driver Bit through.

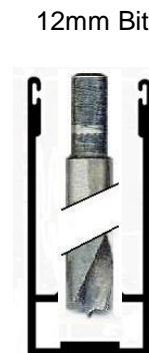

#### Slide Tongues



Place the Tongues (one each side, with Grub Screws attached) into the Bottom rail slot with 'Narrow End' facing out. *(This is the last process of installation)*

Wind down the blind to the required height (usually right to the ground), then mark where the Slide Tongues hit the Middle wall of the Side Channel. Use a 14mm Bit to then drill out the locking hole. This process can be repeated as many times as the customer requires, for extra locking positions.

*note\* You can often use the Inside Reveal Fix installation holes as your Slide Tongue locking hole.*