




Installation Recommendations

Face Fixing Channel X

Step 1


Each Side Channel needs a minimum of 3 Screws (Flat Head - Self Tappers)
1 close to Top, 1 Close to Bottom, 1 Middle.
Drill through Front & Rear Wall of Side Channel with 6mm Bit.

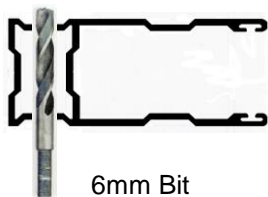

6mm Bit

Step 2

Drill through 'Front Only' with a 10mm Bit to allow the Screw Head & Driver Bit through.
After installation, insert 10mm Plug to cover the hole.

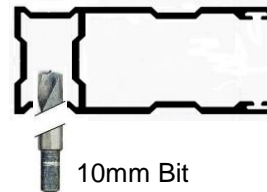

10mm Bit

Inside Reveal Fixing Channel X

Step 1


Each Side Channel needs a minimum of 3 Screws (Flat Head - Self Tappers)
1 close to Top, 1 Close to Bottom, 1 Middle
With Side Channel facing down, Drill through both Rear & Middle walls with 6mm Bit



6mm Bit

Step 2

Turn Side Channel over and Drill through Middle Only' with a 12mm Bit to allow the Screw Head & Driver Bit through.

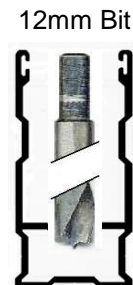

12mm Bit

Slide Tongues

The Slide Tongues have been designed with a 'Pointed End' to allow easy location of the locking holes. Place the Tongues (one each side, with Grub Screws attached) into the Bottom rail slot with 'Pointed End' facing out. *(This is the last process of installation)*

Wind down the blind to the required height (usually right to the ground) then simply firmly flick the Slide Tongues across until it hits the middle wall of the Side Channel, therefore leaving a mark for easy location of the locking hole. Use a 12mm bit to then drill out the locking hole.

note You can often use the Inside Reveal Fix installation holes as your Slide Tongue locking hole.*
