



## DEDUCTIONS when using a CRANK GEARBOX

<b>Keyway Tube</b>	:	Overall Width of Blind <b>LESS 75mm</b>
<b>Side Channel</b>	:	Overall Drop of Blind <b>LESS 102mm</b>
<b>Bottom Rail</b>	:	Overall Width of Blind <b>LESS 75mm</b>
<b>Finished Skin Width</b>	:	Overall Width of Blind <b>LESS 75mm</b>

## FINISHED SKIN CONSTRUCTION

### TOP of finished skin

When using <b>63mm Keyway</b>	:	3.6mm Spline
When using <b>70mm Keyway</b>	:	6mm Rope / Spline or 7.5mm Keder
When using <b>78mm Keyway</b>	:	6mm Rope / Spline or 7.5mm Keder

### BOTTOM of finished skin

<b>Channel X Bottom Rail</b>	:	6mm Rope / Spline or 7.5mm Keder
------------------------------	---	----------------------------------


### Clear PVC Skin

Vertical Joins Only. Edges of Skin to be Strengthened by Sewing Or Welding a strip of Reinforced PVC


## LOCKING

8mm  **SLIDE TONGUES**  8mm


**Locking Holes** : Drill 12mm or 14mm hole inside channel

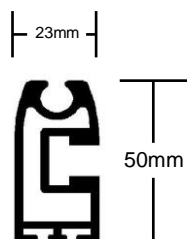

**Bottom Rail**

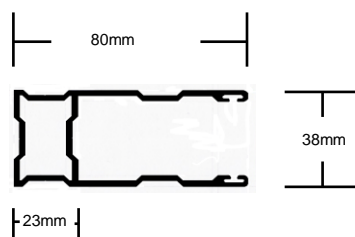

**Side Channel**

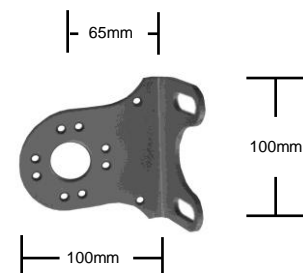

**Universal Bracket**